



FIREPLACE TOWER HEATER



Instruction Manual

Please read the instructions carefully before using the product and keep this user manual for future reference.



1. SAFETY INSTRUCTIONS

When using any electrically powered product, basic safety precautions should always be followed, including the following:

PLEASE READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Remove the unit from its packaging and check to make sure it is in good condition before using.
3. Do not let children play with parts of the packing (such as plastic bags)
4. Close supervision is necessary when the product is used by or near children or infirm persons. Do not allow children to use it as a toy.
5. Do not operate any product with a damaged cord or plug, or after the product malfunctions, or is dropped or appears damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
6. Before unplugging the power cord, be sure to turn the power off. When touching the unit, be sure your hands are dry to prevent electrical shock.
7. Ensure the cord is fully extended before use and arrange it so that it is not in contact with any part of the heater.
8. In use, some parts of the heater are hot. When moving, hold the heater only by the handle provided.
9. Do not use the heater in areas such as garages where petrol, paint or other flammable substances are used or stored.
10. Do not use near or point the heater to furniture, animals, curtains or other inflammable objects. Keep combustible materials such as furniture, bedding and any other combustible materials at least 1 meter from the front and sides, and from the rear of the heater.
11. Do not place the cord under carpet or cover with throw rugs or furniture. Arrange the cord so that it cannot be tripped over.
12. Do not place the heater on bedding or on thick and long pile carpet where the openings may be blocked.
13. To reduce the risk of electric shock, do not immerse or expose the product or flexible cord to rain, moisture or any liquid other than those necessary for correct operation of the product.
14. This product should not be used in the immediate vicinity of water, such as bathtub, washbowls, bathroom swimming pool etc. where the likelihood of immersion or splashing could occur.
15. Switch off and unplug from outlet when not in use, before assembling or disassembling parts and before cleaning. Remove by grasping the plug - do not pull on the cord.
16. A common cause of overheating is deposits of dust and fluff entering the heater. Ensure these deposits are removed regularly by unplugging the heater, allowing it to cool and cleaning as described in the Care, Cleaning and Storage section.
17. Be sure that no other high current appliances are plugged into the same circuit with your heater as an overload can occur.
18. Avoid the use of an extension cord as the extension cord may overheat and cause a risk of fire.
19. Do not use the appliance for other than its intended use.
20. Do not use outdoors. FOR INDOOR USE ONLY.
21. Do not leave the appliance unattended when switched on.




22. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc. Do not cover the unit when in operation.
23. Do not locate the heater immediately below a socket-outlet.
24. The use of attachments or accessories not recommended or sold by the product distributor may cause personal or property hazards or injuries.
25. This product is intended for normal domestic/household use only.
26. Use this heater as described in this manual. Any other uses, not recommended by the manufacturer, may cause fire, electric shock, or injury to persons and may void the warranty.

2. ASSEMBLE

Get the heater body out, assemble the base with the body as following steps:

1. put the base1 and base 2 together
2. Insert the product into the base
3. Rotate the nut

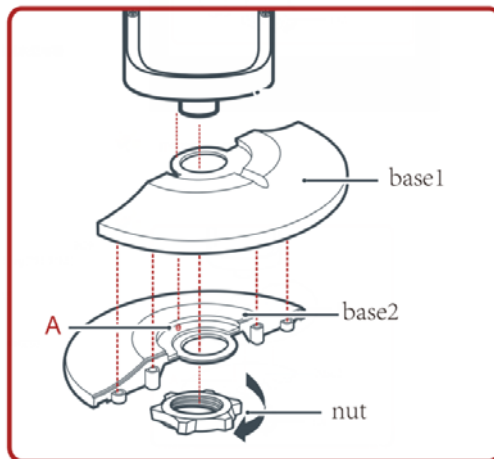

3.USING THE HEATER

1. Before inserting the plug into an electrical outlet, make sure that the electrical supply in your area matches that on the rating label of the unit.
2. When in Standby mode, press  on the control panel will respond to your touch, and the LED display shows the room temperature. And the fan function will be turned on.
 - (a) Low Power: 1000W (Press  one time)
 - (b) High Power: 2000W (Press  two times)
 - (c) Fan function:press this button  three times



- 3- Timer: Press this button  repeat to set a period after which the heater will turn itself off (From 0 hour -12 hours)
 - 4- Oscillation: press this button  to control oscillation function on or off
 - 5- Temperature adjust :Press this button  to adjust room temperature .Temperature setting from 15-45°C. if room temperature reach the setting temperature, the heating stop.if room temperature is below the setting temperature ,the heating turn on again.
 - 6- Fireplace:press this button  to control the fireplace on or off.
- F- Press  to turn off the heater, the unit will keep working 30 seconds of cool air after turn off it . This design can protect item use longer.

4. REMOTE CONTROLLER



Encendido-apagado



Potencia de calor



Temporizador



Ventana efecto fuego




Selector de temperatura



Función oscilación

Funciona con pila CR2025.

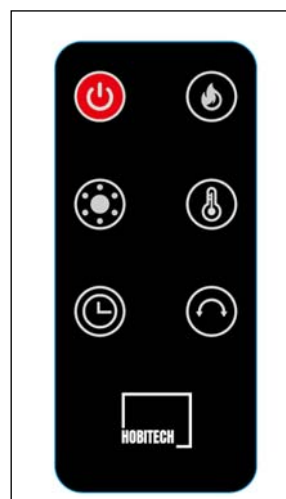

Warning:

Before removing the plug from the socket, switching off and better work for 30-60 second for cool down in condition that protecting inner parts.

5.OVERHEAT PROTECTION

This heater is protected with an overheat protection that switches off the appliance automatically in case of overheat,e.g. due to the total or partial obstruction of the grids. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove the object which is obstructing the grids. Then switch it back on as described above. The appliance should operate normally. Should the problem persist, please contact the nearest customer service.

NOTE: To assist in maintaining the internal components, after pressing the OFF button the fan will continue to blow room air for a period of 30-60 seconds before shutting down to standby.



6.SAFETY SYSTEM

- In the event of abnormal overheating, a safety device shuts down the appliance automatically. After a short cooling down phase, the appliance is ready for use again.
- If you still notice the same defect as above mentioned, remove the plug from the socket and consult your authorized dealer to your after-sales service department.
- During use, do not touch or cover the air outlet. This may cause the unit to over heat, and the safety device to operate.
- The unit is also fitted with a tip over switch. Do not use on thick and long pile carpets, as the heater may not work, due the tip over switch not been activated.

7.MAINTENANCE

- Your appliance must be turn OFF and unplugged before proceeding with any cleaning work.
- Clean the housing with a lightly damp cloth, a vacuum cleaner or a dusting brush.
- Never use flammable or abrasive cleaning agents such as benzene or spirit to clean the appliance.
- Never immerse the appliance in water!
- Clean the air inlet and outlet regularly with a vacuum cleaner.
- If the appliance is not used for an extended period it must be protected against excessive dust and dirt. Please dismount the heater and store in a dry place away from sunlight and dirt.

8. SPECIFICATIONS

Model No	KJ-537K
Voltage	220-240V~
Frequency	50Hz
Output Power (W)	2000W

9.WARRANTY

In the following cases, the guarantee according to current regulations will not be effective:

- a. Any damage resulting from repairs or manipulation unauthorized by the company.
- b. Any damage resulting from misuse, negligence or accident.
- c. Any damage caused by natural disasters or abnormal voltage.
- d. Any damage resulting from cases of use of the machine in contexts other than those described in this manual.

10.RECYCLING



IMPORTANT INFORMATION ON THE CORRECT DISPOSAL OF THE PRODUCT REGARDING THE STANDARD OF THE EUROPEAN UNION 2002/96/EC

Fireplace tower heater



The waste materials of the electrical products must not be dumped with the rest of rubbish waste of the household.

These materials shall be returned to the shop of taken to a recycling point.

Dear Customers, for any doubt related to this product, you may contact our Customer Service. We are more than happy to help you.

hobitech@hobitech.es